# Cyclone II (STR Cleat 2 Loop)

#### Features

- Third party certification to IEC 61914:2009
- 316L stainless steel base with stainless steel strap
- 24 145mm in 15 sizes for trefoil formation / application
- 36 118mm in 8 sizes for multicore cables or single core parallel formations
- 21 68mm in 8 sizes for quad formations
- Cyclone II short circuit rating of 151kA peak fault
- Operating temperature -50°C to +60°C
- Low Smoke & Fume (LSF) liners as standard
- Combined single (M12) and two bolt (M10) base fixing design



www.cmp-products.com



### www.cmp-products.com


# Cyclone II (STR Cleat 2 Loop)






Cleat Installation Instructions

### **CMP Cleat Installation Instructions**

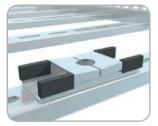

1 Place cleat base onto ladder in desired location along rung

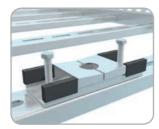

**2** Place fitting(s) (1 x M10 or 2 x M10 - not supplied as standard), through the base and mounting surface



**3** Tighten down to no more than 12N/m torque



4 Place liner base on top



5 Place cables onto base / liner



**6** Wrap the liner around the cables and clip together



**7** Place the strap through the base at the back, pull towards the front and loop two times around the cables



8 Turn the hex key to wind up until tight (resistance is felt when attempting to wind the key). Do not tighten any further as this will only damage the strap.



9 Align the holes of the winding key and retaining bush and put retaining pin through holes until it clips over bush, locking the winding key in place